


hp LaserJet 3390 All-in-One – Copying

<i>How do I:</i>	<i>Steps to perform</i>
1. Make a copy.	Place the document face up in the Automatic document feeder (ADF) or face down on the glass. Press Start Copy .
2. Adjust the copy quality.	On the control panel, press Quality . Press the < and > keys to scroll through the copy quality settings. Select settings and press Start Copy to save a setting and start the copy job, or press ✓ to save the setting without starting the copy job.
3. Set the copier default quality.	Press Menu . Press the < and > keys to highlight Copy Setup and press ✓. Press ✓ to select Default Quality . Press the < and > keys to scroll through the copy quality settings. Select settings and press ✓ to save the settings.
4. Make copies lighter or darker.	Press Lighter/Darker to see the current setting. Press the < and > keys to adjust the setting. Press Start Copy to save a setting and start the copy job, or press ✓ to save the setting without starting the copy job.
5. Adjust the size of the copy.	Press Reduce/Enlarge . Select a paper size, set a custom size (between 25% and 400%), or select 2 or 4 pages per sheet. Press Start Copy to save a setting and start the copy job, or press ✓ to save the setting without starting the copy job.
6. Copy two-sided originals.	Load the originals into the ADF with the first page facing up and the top of the page leading into the ADF. Press 2 Sided . Press the < and > keys to select Copy to 1 to 2 sided . Press ✓. Press Start Copy .

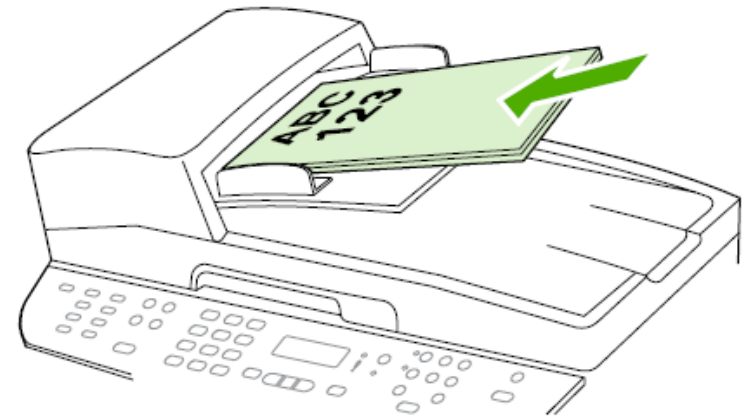

Copy Controls

