

Wegener LED Status Indicators

Mode	LED Status	Condition
Alarm	Red blink = 2	No carrier
	Red blink = 3	No RF signal
	Red blink = 4	In recovery
	Red blink = 5	Eb/No alarm
	Red blink = 11	Not authorized
Warning	Amber blink = 1	No response from SEC_MICRO
	Amber blink = 2	Marginal Eb/No
	Amber blink = 4	Selected audio not available
	Amber blink = 5	RF too low
	Amber blink = 6	RF too high
	Amber blink = 7	Application download failed
Normal	Green	Normal operation

Backup Option – EJ8 (crab-box), HDMI cable, HDMI TV/Projector, LDSAccess WiFi (>6Mbps), 3.5mm Aux (audio) cable, Roku

Roku on LDSAccess WiFi



